



SMART Board® MX (V2)


Need some help with your display?
Check out these basic troubleshooting tips.



Turn on the display

To wake the display, press the Power button  on the front control panel.

To return the display to an energy saving mode, press the Power button  again.

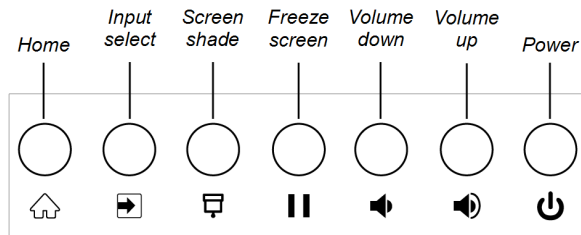


Write and erase on the display

Pick up one of the display's pens and use it to write or draw in digital ink.

Move your fist or palm over the digital ink you want to erase.




Show the connected computer's desktop


After connecting a computer, press the Input Select button  on the front control panel, and then tap the computer's thumbnail:



Note: Be sure to enable touch control of your computer by connecting a USB cable from the computer to the appropriate USB-B receptacle on the display.

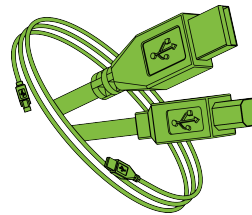

Use the iQ features

The display includes iQ features that you can use without connecting a computer. To access these features, press the Home button  on the front control panel.

You can then use all the iQ features described in the SMART Board display teacher guide (smarttech.com/displayteacherguide).

